


Applied Photovoltaics LAB MANUAL

This manual was designed for use with the Montana Microfabrication Facility at Montana State University. The intention of the manual is to provide lab users and MSU students with a complete description of the methods used to fabricate Solar Cells on 4-inch silicon substrates.

Special Thanks to:
Brian Peterson
Phil Himmer

Author: Todd Kaiser
Montana State University
January 2014

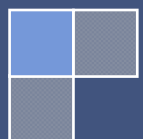

SUPPLIERS

University of Minnesota Nano Fabrication Center (NFC): Photomasks

www.nfc.unm.edu

Virginia Semiconductor: Silicon Substrates

www.virginiasemi.com

EL-CAT Inc.: Silicon Substrates

www.el-cat.com

JT Baker: Chemical Supplies

www.mallbaker.com/default.asp

Technical Glass Products Inc: Quartz-ware

www.technicalglass.com

Kurt J Lesker Company: Evaporation Filaments

www.lesker.com

MSU Chem-store: Labware/Chemical Supplies

www.chemistry.montana.edu/chemstores

Sigma-Aldrich: Chemical Supplies

www.sigmaaldrich.com

SPI Supplies: Wafer Tweezers

<http://www.2spi.com/spihome.html>

Gases Plus: Pressurized Gas Tanks

www.gasesplus.com (406)388-9109

The suggested high temperature process steps for use in Solar Cell EE 408 lab are listed here.

P+ diffusion	950°C	50 min
Wet oxidation	1000°C	90 min
N+ diffusion	825°C	50 min N ₂ /25 min O ₂
Dry oxidation	1000°C	80 min
Anneal	450°C	60 min

Two coats of aluminum should be used on both sides of the wafer

How to use this manual...

The manual is broken up into laboratory segments containing multiple sections: *Goals, Equipment, Parameters, Methods* and *Results*. Each lab a set of process goals is presented to the user along with a list of equipment and the methods used to achieve those goals. The parameters segment is devoted to process dependent parameters specific to the fabrication methods used that week. The parameters are color coded to correspond to a specific process method. The methods section describes the processes used within that lab to achieve the desired goals. The methods are numbered to correspond to a process goal. The result section is left blank for users to record the results of that lab's processes.

11-Lab Overview

Introduction & P+ Rear Diffusion (Cobleigh)	Lab 1
Thermal Oxidation (Mask for Si Etch) (Cobleigh)	Lab 2
Photolithography, Oxide Etch, Silicon Etch (EPS)	Lab 3
Oxide Etch & N+ Front Diffusion (Cobleigh)	Lab 4
Thermal Oxidation (AR coating) (Cobleigh)	Lab 5
Photolithography & Vias Oxide Etch (Front) (EPS)	Lab 6
Cleaning & Aluminum Evaporation (Front) (Cobleigh)	Lab 7
Photolithography & Aluminum Contact Etch (Front) (EPS)	Lab 8
Cleaning & Aluminum Evaporation (Back) (Cobleigh)	Lab 9
Characterization (Cobleigh)	Lab 10
Dicing & Characterization (Cobleigh)	Lab 11

GOALS:

1. Familiarize students with the cleanroom layout, equipment, safety and procedure.
2. Present an overview of the solar cell fabrication process and various processing techniques (i.e. photolithography, etching, etc)
3. ID individual wafers
4. P+ Diffusion


EQUIPMENT:

- Wafer Scribe
- Boron Diffusion Furnace
- BORONPLUS GS139 Boron Sources

PARAMETERS

Boron Diffusion Parameters (Back Contact)

Boron Source	Temperature (°C)	Time (minutes)	N ₂ Flow
BORONPLUS GS-139	950	50	7

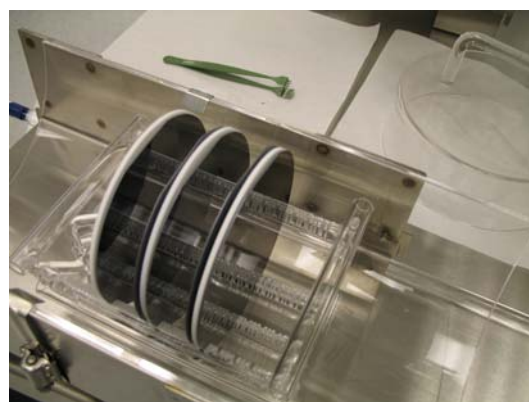

Methods:

Lab 1

1. Clean Room Etiquette

The lab employs many hazardous chemicals and processes. The safety of the lab students and users is the number one priority when participating in the lab. Follow all gowning and safety procedures outlined by the lab TA.

To maintain the integrity of the wafers and the equipment, adhere to the process descriptions and details provided by the lab TA.

The most common reason a wafer will not make it to the end of the fabrication sequence, is poor handling. The wafer should be handled with the wafer-tweezers and with great attention. Limit the handling of the wafer with gloved hands to the edges and only during necessary circumstances. Never touch the wafer with a bare hand and never touch the center of the wafer, even with gloved hands.

When processing in the cleanroom, sources of contamination are another factor which may inhibit the success of the fabrication. Therefore, do not talk next to the wafers, keep the lid to the wafer box closed and lastly, do not hastily move about the clean room and do not get in a hurry to finish a process. When a lab student gets in a hurry it creates a situation with a greater likelihood of breaking a wafer or damaging a piece of equipment.

Follow proper gowning procedure and remember the clothing you wear is to protect your wafer from you **not** to protect you from dangerous chemicals.



Methods:

2. Process Overview:

These Solar Cells are fabricated using a combination of thin film and bulk silicon processing techniques. The sequence is a simple set of repeating steps including oxidation, etching, diffusion, cleaning and patterning. An overview of the sequence is shown to the right (**Figure 1**). The fabrication portion of the lab should take roughly ten labs to complete, with the final lab devoted to testing.

Document everything seen and done in the clean room. Record all measureable quantities and procedures and any deviations. It is important to record every detail which may help explain device failures or anomalies.

3. Wafer Characterization and ID:

Semiconductor substrates, referred to as wafers, can easily be ordered through retailers and customized for specific applications. The wafers used for the lab are *100mm in diameter, $525 \pm 25 \mu\text{m}$ thick, $\langle 100 \rangle$, single-side polished, single-crystal silicon, doped with boron (P-type) to a resistivity of $1\text{-}10 \Omega\text{-cm}$.*

A simple test to determine if the substrate is P-type or N-type silicon is known as the “Hot Probe Test.” Using a Digital Multi Meter (DMM) and a soldering iron, heat the positive probe of the DMM for several minutes with the soldering iron. Make sure the DMM is set to measure “mV.” Place both probe tips, positive and negative(ground) to the wafer surface. If the DMM indicates a positive voltage the substrate is N-type, if the voltage is negative the substrate is P-type. This test should be accurate up to a resistivity of $1000 \Omega\text{-cm}$.

Figure 2 Figure showing determination of silicon substrate type.


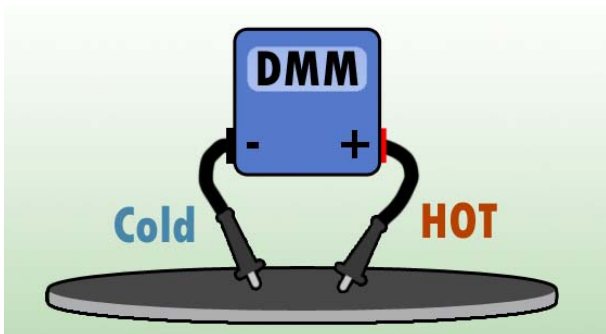


Figure 1 Overview of the fabrication sequence.

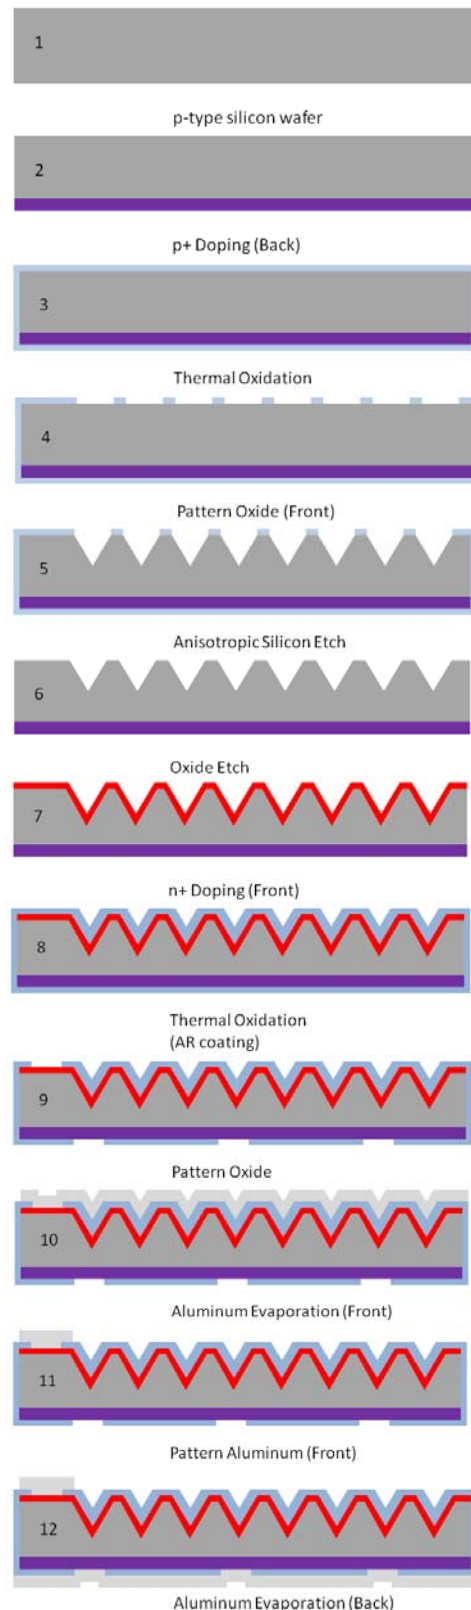

Methods:

3. Wafer Characterization and ID:

Continued...

To keep track of individual wafers, a scribe can be used to mark the **back** of the wafer with an identification mark, typically a number or letter (**Figure 3**).

Proceed by firmly pressing the tip of the scribe against the surface of the wafer and with as few strokes as possible 'scribe' a section number and wafer number. Scribing should be done as close to the edge as possible to limit the effect on fabricated devices.

4. Boron Diffusion:

(Check *Parameters* section for details)

The goal of the boron diffusion is to create highly doped P-type silicon that will improve the contact between the silicon and the metal on the back of the cell.

To diffuse P-type (Boron) material, ramp the *Lindberg Blue Boron Diffusion Furnace* to 600°C and set the nitrogen flow. Remove the quartz boat with the solid, white, *BORONPLUS GS-139 sources* already in place. Load the silicon wafers next to the sources with the back side facing a source (**Figure 4**). Insert the quartz boat to the center of the furnace and ramp the furnace to the desired temperature (**Figure 5**). When the desired temperature is reached start the timer. After the allotted time, ramp the furnace down to 600°C (or 0°C if finished with furnace), pull the quartz boat and remove the wafers and set them aside to cool. When the temperature drops below 400°C the nitrogen can be turned off.

Figure 5 Inserting the boat into the Boron Diffusion Furnace.



Lab 1

Figure 3 Scribing the surface of a wafer using a steel-tipped scribe.


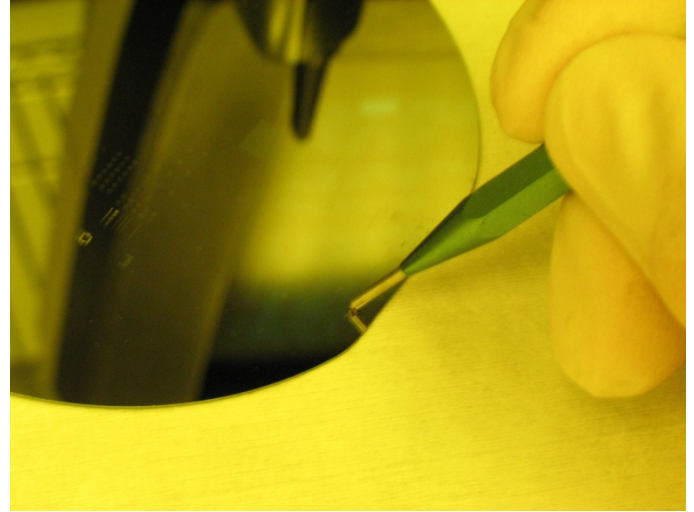


Figure 4 An illustration of how the wafers are loaded into the quartz boat next to the diffusion sources.

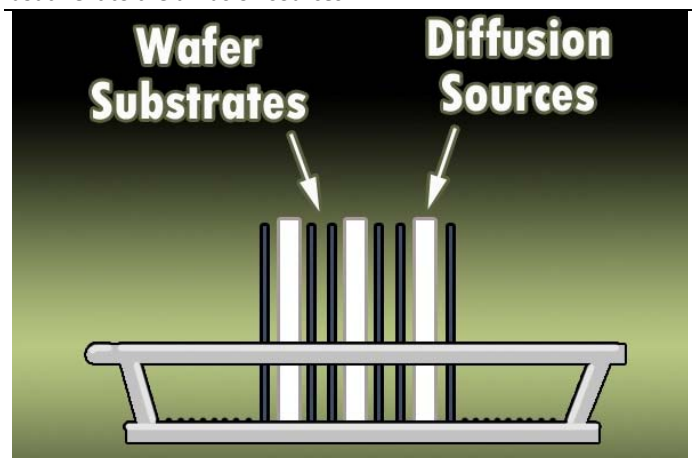

GOALS:

1. Strip the Borosilicate Glass
2. Measure Sheet Resistivity
3. Oxidation for Silicon Etch Mask

EQUIPMENT:

- 6:1 BOE
- Teflon Dish
- JANDEL 4-point Probe Station
- MODULAB Oxidation Furnace

PARAMETERS:

SiO ₂ Etch Parameters*				
BOE concentration	SiO ₂ Etch Rate (Å/min)	Approx. Etch Time (minutes)		Etch Mask
6:1	900	5*		none
Oxidation Parameters				
Temperature (°C)	Time (minutes)	Type (wet or dry)	N ₂ /O ₂ Flow	Bubbler Setting
1000	90	Wet	7/9	40



Methods:

1. Etching the SiO_2 :


(Check Parameters section for details)

There is a layer of borosilicate glass on the surface of the wafer that needs to be removed before the wafers can go into the oxidation furnace. This step should be carried out with extreme care. Begin by pouring enough 6:1 BOE into a *Teflon or plastic dish*. Submerge the wafer in the 6:1 BOE for the appropriate amount of time or until the exposed SiO_2 is completely removed. Rinse in DI water and dry with the nitrogen gun.

2. Sheet Resistivity Measurements:

The back of the wafer now has a higher conducting layer on the surface. To characterize the doping the sheet resistivity is measured. Use the *JANDEL 4-point probe* (**Figure 6**) to measure the sheet resistivity of the diffusion. Start by raising the probe arm, uncapping the tip and placing the wafer on the stage. Align the probes over the rear of the wafer opposite of the flat, then lower the arm to make contact with the wafer. Set the current to 1uA (press '1' and 'uA') Press 'FWD' The unit is now passing a current through the sample. It should be giving a positive voltage reading. If the voltage reading is less than a millivolt, increase the current by an order of magnitude until you get a voltage reading of greater than one millivolt. Record the value. Press 'REV' The unit is now passing a current through the sample in the reverse direction. It should be giving a negative voltage reading about the same magnitude as the FWD measurement. Record the value.

Figure 6 The four-point probe used to measure sheet resistivity

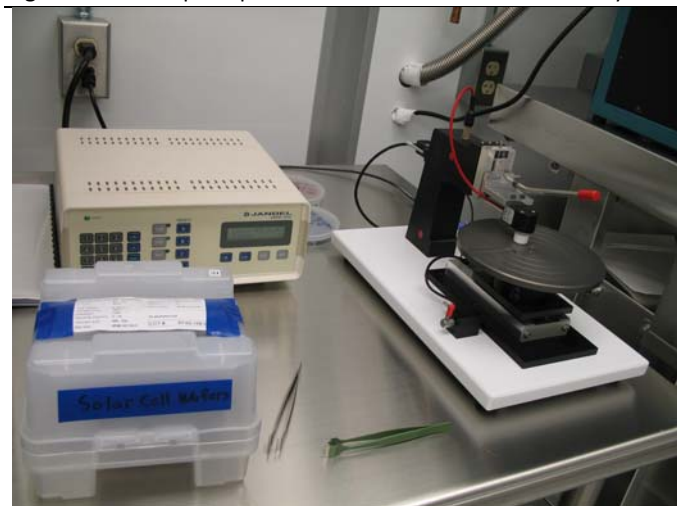

Lab 2

Increase the current by another order of magnitude but do not exceed 100 mA, the voltage should also increase by an order of magnitude. Record the value Press 'FWD' Record the value for the new forward current, it should be an order of magnitude larger than the previously recorded value. Press ' Ω/\square '. Record this sheet resistivity measurement.

Figure 7 The sheet resistivity measurement is taken by pressing the ' Ω/\square ' button.



3. Oxidation: Growing SiO_2

(Check Parameters section for details)

The goal of the first oxidation run is to grow enough silicon dioxide (SiO_2) roughly a $0.5\mu\text{m}$ thick film. This will be used to protect the silicon where silicon is not to be etched.

To oxidize, insert the wafers into the *MODULAB oxidation furnace* using the quartz rod and quartz boat (**see Figure 7**). There should be two dummy wafers, one at the front of the boat and another at the rear, to maintain uniformity across the boat. Ramp the furnace to 600°C before the removing the quartz boat and loading the wafers. Prior to the temperature reaching 400°C , turn on the nitrogen to purge the furnace. Also, set the potentiometer on the bubbler if performing a wet oxidation (which we are). Once the wafers are loaded and in place at the center of the furnace, ramp the furnace to the desired temperature. When the desired temperature is reached start the timer, stop the nitrogen flow and turn on the oxygen. After the allotted time, ramp the furnace down to 600°C , pull the boat, remove the wafers, and set them aside to cool. When finished, turn the furnace to 0°C and turn off the nitrogen when the temperature drops below 400°C .

Photolithography, Oxide & Silicon Etch Lab 3

GOALS:

1. Measure the thickness of the SiO₂ with the ellipsometer
2. Photolithography (PV Mask 1 Si Etch)
3. Etch SiO₂
4. Solvent Clean
5. Etch Silicon

EQUIPMENT & Materials:

- Nanospec
- Brewer spin-coater and hot plate
- Shipley 1813 Positive Photoresist
- ABM Contact Mask Aligner
- MF 319 Developer
- 6:1 BOE
- TMAH

PARAMETERS:

Hard-bake Parameters (back)							
Hard-bake Program		Temperature (°C)			Time (minutes)		
#2		115			2		
Spin-coat & Soft-bake Parameters (front)							
Spin Program	Speed (RPM)	Time (seconds)	Ramp (RPM/s)	Dispense Type (automatic or manual)	Soft-bake Program	Temperature (°C)	Time (minutes)
#9	5250	30	20000	Manual (static)	#9	115	1
Exposure & Development Parameters (MASK #1)							
Mask Orientation (writing toward or away from user)	Wafer Orientation (flat to the left or the right)	UV Intensity Channel B (mW/cm²)	UV Dose (J/cm²)	Exposure Time (seconds)	Development Time (seconds)		
Toward	Left	30	~135	4.5	60		
Hard-bake Parameters							
Hard-bake Program		Temperature (°C)			Time (seconds)		
#9		115			60		
SiO ₂ Etch Parameters* for 8,000-8,500Å thick SiO ₂ layer							
BOE concentration	SiO ₂ Etch Rate (Å/min)		Approx. Etch Time (minutes)		Etch Mask		
6:1	900		15*		Shipley 1813 Photoresist		
Bulk Silicon Etch Parameters *for multiple wafer etch setup							
Etchant	Bath Temperature* (°C)		(100) Etch Rate (microns/hr)		Approximate Etch Time (hr)		Etch Mask
12.5% TMAH	75		21.5		4		SiO ₂

Methods:

1. Measuring the SiO_2 thickness:

Measure the thickness of the silicon dioxide at several different points on the wafer using the *ellipsometer*. For reference, the ellipsometer prompts for measuring SiO_2 thickness estimate and index they are:

Thickness	5000 Å
Index	1.46

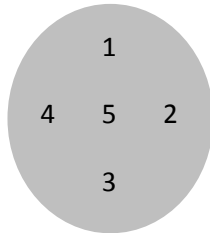


Figure 8 The oxide thickness is measured using the ellipsometer. It measures the light intensity as a function of polarization reflected off the surfaces on the wafer



2. Photolithography with Mask 1 (Si Etch):

Spin-coating & Soft-baking

(Check Parameters section for details)

The goal of the photolithography step is to transfer patterns from the mask set to the wafer surface. Photoresist, which is a UV sensitive chemical, is patterned by selectively exposing certain regions with ultraviolet light. Photoresist is also chemically resistant to the SiO_2 etchant, hydrofluoric acid (also referred to as BOE); therefore it is used to mask, or block, select portions of the SiO_2 from being etched. The first patterns transferred to the wafer are the inverted pyramid texture, which reduces the reflection loss from the surface.

Begin by using the *BREWER spin-coater* to spin a thin film (~1µm) of *SHIPLEY 1813* photoresist onto the **backside** (rough) of the wafer. Next, transfer the wafer

to the adjacent hotplate and soft-bake to remove solvents and harden the resist. A good coating of photoresist will be barely visible to the naked eye and have a minimal number of streaks or blotches. If there are a large number of defects, solvent clean, dehydrate, and try re-spinning more photoresist.

Now repeat the process on the **topside** (smooth) of the wafer, spin on the photoresist and soft-bake to remove solvent and harden the photoresist.

3. Photolithography with Mask #1 (Si Etch):

Exposure & Development

(Check Parameters section for details)

Proceed by patterning the photoresist with Mask #1. Start by centering the chuck inside the mask holder then load the mask onto the *ABM contact-aligner* mask stage.

Turn the mask-vac on and raise the mask stage. Carefully, load the wafer onto the substrate chuck and orient it such that the <110> plane (wafer flat) is to the bottom and running straight left and right. The wafer should be centered in the chuck. Turn on the substrate-vac to lock the wafer in place and lower the chuck to avoid hitting the contact mask. Next, lower the mask stage and raise the substrate chuck up to meet the mask, while holding the chuck tilt release button, fringe lines will become visible as the wafer and mask come into contact. Align the mask to the wafer using the markers on the sides of the wafer (no alignment for the first photolithography step). Turn on the contact-vac to remove any air gap between mask and wafer. You should be able to see interference fringes in the etch windows. Adjust the exposure time and channel setting then expose. Remove the wafer by turning off the contact-vac, lowering the substrate chuck, raising the mask frame, and turning off the substrate-vac. Transfer the wafer to a dish of *MF319 developer* (a faint outline of the features can be seen at this point), submerge the wafer in MF319 and gently swirl for 30-60 seconds until the exposed resist is completely dissolved. If done correctly there should be no photoresist left in the exposed regions. If there is, resubmerge the wafer in the MF319 developer for additional time.

Methods:

4. Hard-baking:

(Check Parameters section for details)

Hard-baking is the final step in the photolithography sequence, but to emphasize its importance it gets its own heading. The goal of the hard-bake is to remove any remaining solvents and/or water from the resist. It has been observed, that without hard-baking, the photoresist exhibits adhesion problems and frequently delaminates from the surface during etching. Hard-baking is very similar to soft-baking and follows the same procedure. Load a wafer onto a hotplate for a set time at the appropriate temperature.

5. Etching the SiO_2 :

(Check Parameters section for details)

The goal of the SiO_2 etch is to remove the silicon dioxide from the exposed regions in the photoresist. Silicon dioxide is etched with BOE (Buffered Oxide Etch) which is a combination of hydrofluoric acid and buffering chemicals to stabilize the reaction. BOE is highly selective to silicon dioxide so the photoresist will not be etched.

This step should be carried out by the lab TA for safety reasons. Begin by loading the wafers into a *Teflon cassette* with equal spacing between wafers. Using the handle, submerge the cassette in 6:1 BOE for the appropriate amount of time or until the exposed SiO_2 is completely removed. To determine if the SiO_2 is completely removed, check the regions for color (see **Figure 9**) and hydrophobicity. When the etch is complete, remove the cassette and rinse the wafers in a DI water rinse sink. Pull the cassette from the rinse sink and dry individual wafers with the nitrogen gun.

6. Solvent Clean:

REPEAT: To remove photoresist with a solvent clean begin by placing an evaporating dish on the solvent bench to catch solvent waste. Rinse the wafer with *acetone* using the squirt bottle, follow with *isopropyl* and *methanol* (**Figure 10**). The acetone will remove the photoresist and the isopropyl and methanol will remove any acetone residue. Rinse the wafers in DI water and dry with a nitrogen gun.

Lab 3

7. Bulk Silicon Etch in TMAH:

(Check Parameters section for details)

The goal of the bulk silicon etch is to create the inverted pyramids for reducing the reflection off the solar cell. Be sure that the TMAH bath has reached the set temperature. Place the wafers in the cassette and completely submerge the wafers in the bath. Start the timer. The etchant attacks the surface plane of the silicon crystal (100) but etches the angled planes (111) much slower. The results are inverted pyramids etched into the surface of the wafer where the silicon is not protected by the oxide mask layer. The etch is complete when the diagonals of the corners meet in the center.

Figure 9 Wafers that have oxide will have a characteristic color depending on the thickness of the oxide.

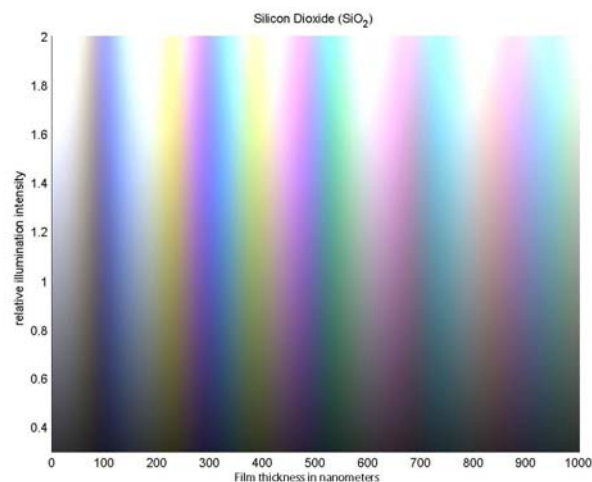


Figure 10 Use a three solvent clean to remove the photoresist from the wafer.



GOALS:

1. Take pictures using the microscope and digital camera.
2. Strip the SiO_2
3. Phosphorus Diffusion

EQUIPMENT:

- Optical Microscope
- Digital Camera
- 6:1 BOE
- Teflon cassette
- Phosphorous Diffusion Furnace
- PHOSPLUS TP-250 Phosphorous Sources

PARAMETERS:

SiO ₂ Etch Parameters* for 8,000-8,500Å thick SiO ₂ layer			
BOE concentration	SiO ₂ Etch Rate (Å/min)	Approx. Etch Time (minutes)	Etch Mask
6:1	900	15*	none
Phosphorous Diffusion Parameters (N+)			
Phosphorous Source	Temperature (°C)	Time (minutes)	N ₂ Flow
PHOSPLUS TP-250	825	50 N ₂ followed by 25 with O ₂	7



Methods:

1. Taking Pictures:

With the silicon etch completed, the wafers now have observable features. From this point, one goal of the lab is to document the fabrication progress by taking pictures of the surface of the wafer as it moves through the sequence. Begin by using the *optical microscope* and *digital camera* to take a picture of the textured front of the wafer.

2. Stripping the SiO_2 :

(Check Parameters section for details)

Prepare the wafer surface for the next diffusion by completely removing all the SiO_2 .

REPEAT: This step should be carried out by the lab TA for safety reasons. Begin by loading the wafers into a *Teflon cassette* with equal spacing between wafers.

Figure 11 Wafers being stripped of SiO_2 in a 6:1 BOE solution.



Figure 12 Wafers being stripped of SiO_2 in a 6:1 BOE solution.



Lab 4

Using the handle, submerge the cassette in 6:1 BOE for the appropriate amount of time or until the exposed SiO_2 is completely removed (**Figure 11**). To determine if the SiO_2 is completely removed, check the regions for color (see **Figure 9**) and hydrophobicity. When the etch is complete, remove the cassette and rinse the wafers in a DI water rinse sink (**Figure 12**). Pull the cassette from the rinse sink and dry individual wafers with the nitrogen gun.

3. Phosphorous Diffusion:

(Check Parameters section for details)

The goal of the phosphorous diffusion is to create highly doped N-type silicon to create the pn junction of the solar cell.

To diffuse N-type (Phosphorous) material, ramp the MODULAB Phosphorous Diffusion Furnace to 600°C and set the nitrogen flow. Remove the quartz boat with the solid, white, PHOSPLUS TP-250 sources already in place. Load the silicon wafers next to the sources with the patterned side facing a source. Insert the quartz boat to the center of the furnace and ramp the furnace to the desired temperature. When the desired temperature is reached start the timer. After the allotted time, ramp the furnace down to 600°C (or 0°C if finished with furnace), pull the quartz boat and remove the wafers and set them aside to cool. When the temperature drops below 400°C the nitrogen can be turned off.

Figure 13 Placing the boat tray on the front of the Phosphorus Diffusion Furnace .



GOALS:



1. Strip the phosphosilicate glass (PSG)
2. Measure Sheet Resistivity
3. Dry Oxidation

EQUIPMENT:

- 6:1 BOE
- Teflon Dish
- JANDEL 4-point Probe Station
- MODULAB Oxidation Furnace

PARAMETERS:

Oxidation Parameters				
Temperature (°C)	Time (minutes)	Type (wet or dry)	N ₂ /O ₂ Flow	Bubbler Setting
1000	80	Dry	7/9	off

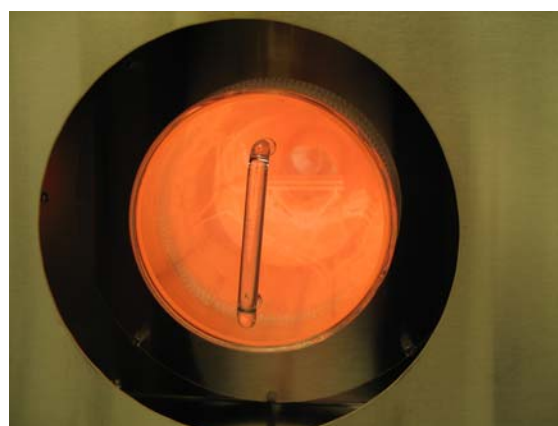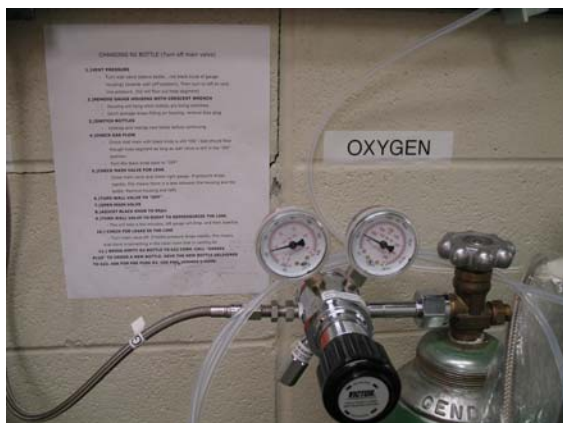

Methods:

1. Etching the SiO_2 :

(Check Parameters section for details)

There is a layer of phosphosilicate glass on the surface of the wafer that needs to be removed before the wafers can go into the oxidation furnace. This step should be carried out with extreme care. Begin by pouring enough 6:1 BOE into a *Teflon or plastic dish*. Submerge the wafer in the 6:1 BOE for the appropriate amount of time or until the exposed SiO_2 is completely removed.

2. Sheet Resistivity Measurements:

REPEAT: The front of the wafer now has a higher conducting layer on the surface. To characterize the doping the sheet resistivity is measured. Use the *JANDEL 4-point probe* to measure the sheet resistivity of the diffusion. Start by raising the probe arm, uncapping the tip and placing the wafer on the stage. Align the probes over the rear of the wafer opposite of the flat, then lower the probe arm to make contact with the wafer. Set the current to 1uA (press '1' and 'uA') Press 'FWD' The unit is now passing a current through the sample. It should be giving a positive voltage reading. If the voltage reading is less than a millivolt, increase the current by an order of magnitude until you get a voltage reading of greater than one millivolt. Record the value. Press 'REV' The unit is now passing a current through the sample in the reverse direction. It should be giving a negative voltage reading about the same magnitude as the FWD measurement. Record the value. Increase the current by another order of magnitude but do not exceed 100 mA, the voltage should also increase by an order of magnitude. Record the value Press 'FWD' Record the value for the new forward current, it should be an order of magnitude larger than the previously recorded value. Press ' Ω/\square '. Record this sheet resistivity measurement.

The thermal processing will cause the dopants to move farther into the substrate changing the sheet resistivity each time the wafers go into the furnaces. Remeasure the sheet resistivity of the back and compare to the initial measurement.


3. Dry Oxidation: Growing SiO_2

(Check Parameters section for details)

The goal of this oxidation run is to grow the antireflective coating. The oxide thickness should be approximately 1300Å thick. The method of oxidation differs from the previous run, the oxide will be grown with dry O_2 .


REPEAT: To oxidize, insert the wafers into oxidation furnace using the quartz rod and quartz boat. There should be two dummy wafers, one at the front of the boat and another at the rear, to maintain uniformity across the boat. Ramp the furnace to 600°C before the removing the quartz boat and loading the wafers. Prior to the temperature reaching 400°C, turn on the nitrogen to purge the furnace. Load the wafers and insert the quartz boat to the center of the furnace and ramp the furnace to the desired temperature. When the desired temperature is reached start the timer, stop the nitrogen flow and turn on the oxygen. After the allotted time, ramp the furnace down to 600°C (or 0°C if finished with furnace), pull the boat, remove the wafers, and set them aside to cool.

Figure 14 After oxidation the wafer will appear blue .

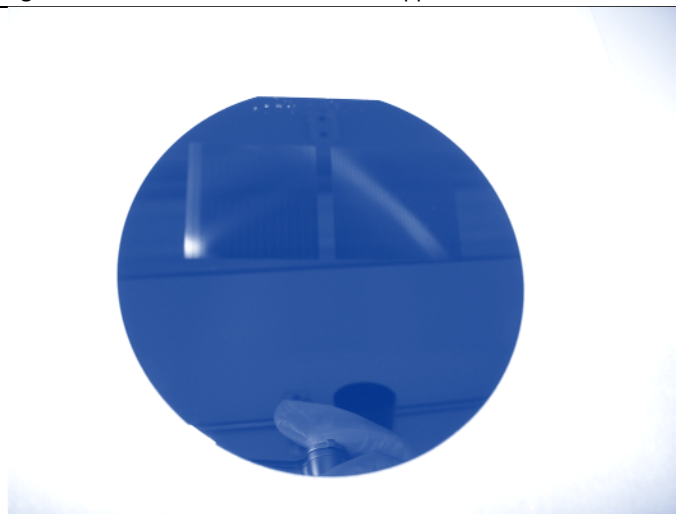


Masks:

Bulk etch of silicon (very small squares that cause the large squares to appear solid).

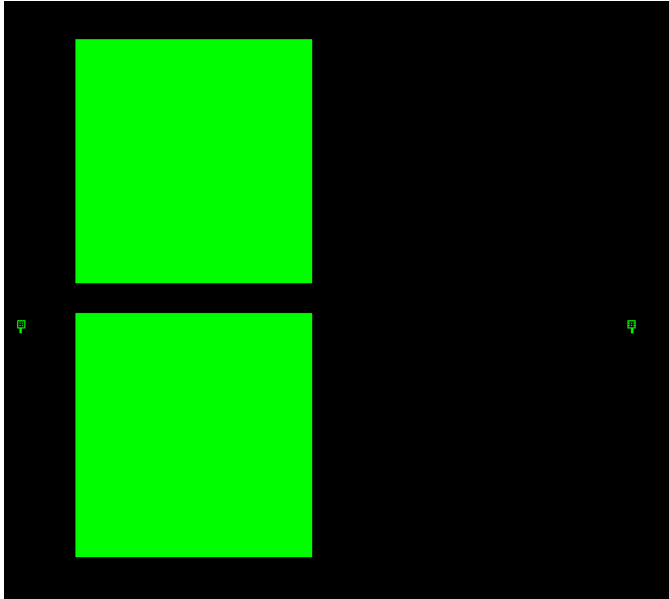


Front silicon dioxide etch to expose the silicon for metal contacts.

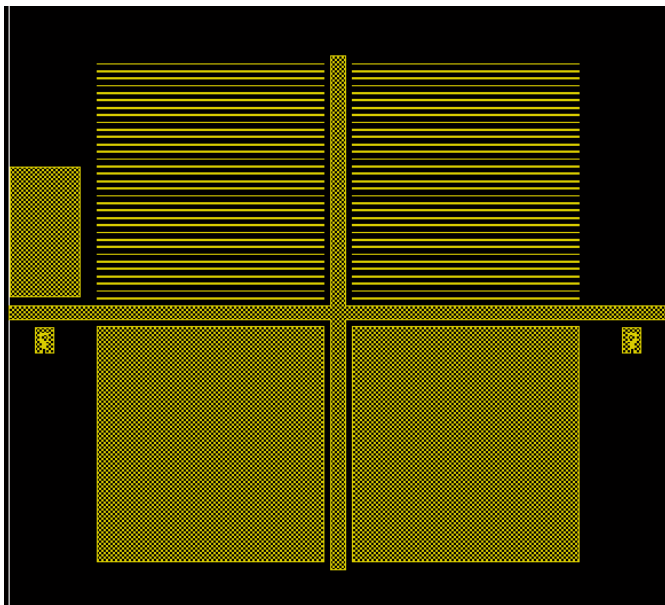

Lab 5

The metal etch creates the electrical contacts and wording on the surface.

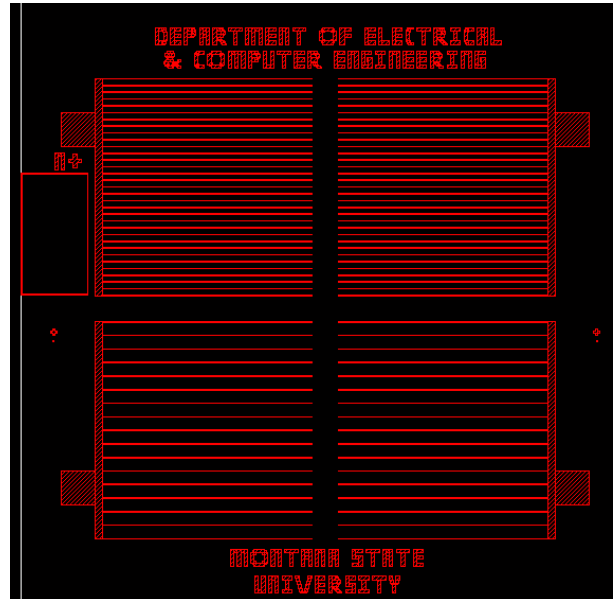

Photolithography & Vias Oxide Etch

Lab 6

GOALS:

1. Measure the thickness of the SiO₂ layer with the ellipsometer
2. Photolithography (PV Mask 4 Backside Contacts)
3. Hardbake
4. Photolithography (PV Mask 2 SiO₂ Etch)
5. Hardbake
6. Oxide Etch

EQUIPMENT:

- Ellipsometer
- BREWER Spin-coater & Hotplate
- SHIPLEY 1805 Positive Photoresist
- ABM Contact Mask Aligner
- MF 319 Developer
- 6:1 BOE
- Teflon Cassette

PARAMETERS:

Spin-coat & Soft-bake Parameters

Spin Program	Speed (RPM)	Time (seconds)	Ramp (RPM/s)	Dispense Type (automatic or manual)	Soft-bake Program	Temperature (°C)	Time (minutes)
#9	5250	30	20000	Manual (static)	#9	115	1

Exposure & Development Parameters (MASK #4)

Mask Orientation (writing toward or away from user)	Wafer Orientation (flat to the left or the right)	UV Intensity Channel B (mW/cm ²)	UV Dose (J/cm ²)	Exposure Time (seconds)	Development Time (seconds)
Toward	Left	30	~135	4.5	30-60

Hard-bake Parameters

Hard-bake Program	Temperature (°C)	Time (minutes)
#9	115	1

Exposure & Development Parameters (MASK #2)

Mask Orientation (writing toward or away from user)	Wafer Orientation (flat to the left or the right)	UV Intensity Channel B (mW/cm ²)	UV Dose (J/cm ²)	Exposure Time (seconds)	Development Time (seconds)
Toward	Left	30	~135	4.5	30-60

Hard-bake Parameters

Hard-bake Program	Temperature (°C)	Time (minutes)
#9	115	1

SiO₂ Etch Parameters* for 4,200-4,500Å thick SiO₂ layer


BOE concentration	SiO ₂ Etch Rate (Å/min)	Approx. Etch Time (minutes)	Etch Mask
6:1	900	5*	Shipley 1805 Photoresist

Methods:

1. Measuring the SiO₂ thickness:

REPEAT: Measure the thickness of the silicon dioxide at several different points on the wafer using the *ellipsometer*. For reference, the ellipsometer prompts for measuring SiO₂ thickness estimate and index they are:

Thickness	5000 Å
Index	1.46

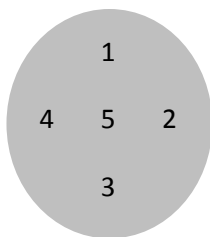

2. Photolithography with Mask #4 (Backside Contacts):

Spin-coating & Soft-baking

(Check Parameters section for details)

The fourth mask contains the features of the backside contact via etch. The vias are holes in the SiO₂ which allow the aluminum pads to contact the diffused silicon surface.

REPEAT: Begin by using the *BREWER spin-coater* to spin a thin film of *SHIPLEY 1813* photoresist onto the backside of the wafer. Next, transfer the wafer to the adjacent hotplate and soft-bake to remove solvents and harden the resist. A good coating of photoresist will be barely visible to the naked eye and have a minimal number of streaks or blotches (see **Figure 7**). If there are a large number of defects, solvent clean, dehydrate, and try re-spinning the photoresist a second time.

Figure 15 Student pouring photoresist on wafer .



Lab 6

3. Photolithography with Mask #4 (Backside Contacts):

Exposure & Development

(Check Parameters section for details)

Proceed by patterning the photoresist with Mask #4.

REPEAT: Load the mask onto the *ABM contact-aligner* mask stage. Turn the mask-vac on and raise the mask stage. Carefully, load the wafer onto the substrate chuck backside up and orient it such that the <110> plane (wafer flat) is to the left and running straight up and down. Turn on the substrate-vac to lock the wafer in place and lower the chuck to avoid hitting the contact mask. Next, lower the mask stage and raise the substrate chuck up to meet the mask, fringe lines will become visible as the wafer and mask come into contact. Align the mask to the wafer using the markers on the sides of the wafer. Turn on the contact-vac to remove any air gap between mask and wafer. Adjust the exposure time and channel setting then expose. Remove the wafer by turning off the contact-vac, lowering the substrate chuck, raising the mask frame, and turning off the substrate-vac. Transfer the wafer to a dish of *MF319 developer* (a faint outline of the features can be seen at this point), submerge the wafer in MF319 and gently swirl for 30-60 seconds until the exposed resist is completely dissolved. If done correctly there should be no photoresist left in the diffusion contact regions (see **Figure 8**). If there is, resubmerge the wafer in the MF319 developer for additional time. If unsuccessful, use a solvent clean to strip the photoresist, dehydrate and re-spin again. When finished, pour the used MF319 into the MF319 waste container located under the solvent bench next to the photoresist.

Methods:

4. Hard-baking:

(Check Parameters section for details)

REPEAT: It has been observed, that without hard-baking, the photoresist exhibits adhesion problems and frequently delaminates from the surface during etching. Hard-baking is very similar to soft-baking and follows the same procedure. Load a wafer onto a hotplate for a set time at the appropriate temperature.

5. Photolithography with Mask #2 (SiO_2 Etch): Spin-coating & Soft-baking

(Check Parameters section for details)

The PV Mask #2 contains the features of the front side oxide contact etch. The oxide is removed which allows the aluminum fingers to contact the diffused silicon surface.

REPEAT: Begin by using the *BREWER spin-coater* to spin a thin film of *SHIPLEY 1813* photoresist onto the topside of the wafer. Next, transfer the wafer to the adjacent hotplate and soft-bake to remove solvents and harden the resist. A good coating of photoresist will be barely visible to the naked eye and have a minimal number of streaks or blotches (see **Figure 7**). If there are a large number of defects, solvent clean, dehydrate, and try re-spinning more photoresist.

6. Photolithography with Mask #2 (SiO_2 Etch): Exposure & Development

(Check Parameters section for details)

Proceed by patterning the photoresist with Mask #2.

REPEAT: Load the mask onto the *ABM contact-aligner* mask stage. Turn the mask-vac on and raise the mask stage. Carefully, load the wafer onto the substrate chuck top surface up and orient it such that the $\langle 110 \rangle$ plane (wafer flat) is to the left and running straight up and down. Turn on the substrate-vac to lock the wafer in place and lower the chuck to avoid hitting the contact mask.

Lab 6

Next, lower the mask stage and raise the substrate chuck up to meet the mask, fringe lines will become visible as the wafer and mask come into contact. Align the mask to the wafer using the markers on the sides of the wafer. Turn on the contact-vac to remove any air gap between mask and wafer. Adjust the exposure time and channel setting then expose. Remove the wafer by turning off the contact-vac, lowering the substrate chuck, raising the mask frame, and turning off the substrate-vac. Transfer the wafer to a dish of *MF319 developer* (a faint outline of the features can be seen at this point), submerge the wafer in MF319 and gently swirl for 30-60 seconds until the exposed resist is completely dissolved. If done correctly there should be no photoresist left in the diffusion contact regions (see **Figure 8**). If there is, resubmerge the wafer in the MF319 developer for additional time. If unsuccessful, use a solvent clean to strip the photoresist, dehydrate and re-spin again. When finished, pour the used MF319 into the MF319 waste container located under the solvent bench next to the photoresist.

7. Etching the SiO_2 :

(Check Parameters section for details)

REPEAT: This step should be carried out by the lab TA for safety reasons. Begin by loading the wafers into a *Teflon cassette* with equal spacing between wafers. Using the handle, submerge the cassette in 6:1 *BOE* for the appropriate amount of time or until the exposed SiO_2 is completely removed. To determine if the SiO_2 is completely removed, check the regions for color (see **Figure 9**) and hydrophobicity. When the etch is complete, remove the cassette and rinse the wafers in a bucket of DI water. Pull the cassette and place in the rinse sink then run the rinse cycle dry the wafers with the nitrogen gun when completed

Cleaning & Al Evaporation (Front)

Lab 7

GOALS:

1. Take pictures using the microscope and digital camera
2. Solvent Clean
3. Aluminum PVD
4. Measure Sheet Resistivity




EQUIPMENT:

- Optical Microscope
- CANON Digital Camera
- Acetone, Methanol, Isopropyl
- MODULAB Physical Vapor Deposition System
- JANDEL 4-point Probe Station

PARAMETERS:

Aluminum Deposit Parameters* for 3000-4000Å thick Aluminum layer

Al Foil Area (cm ²)	Al Foil Thickness (μ)	Filament to Wafer Distance (cm)	Power Level
30	40	13.5	40%

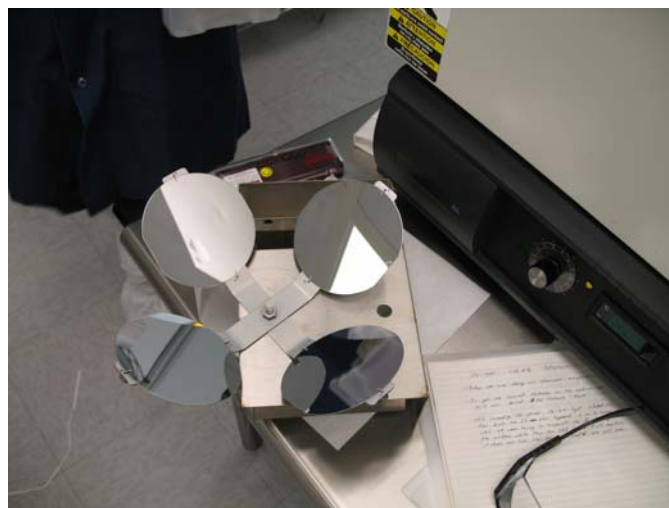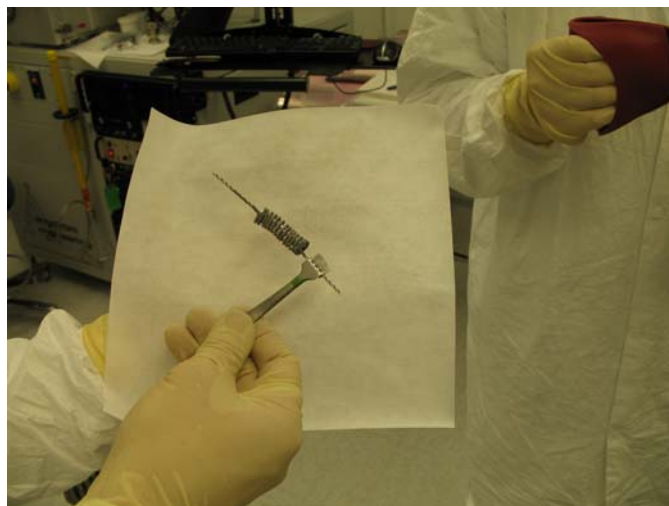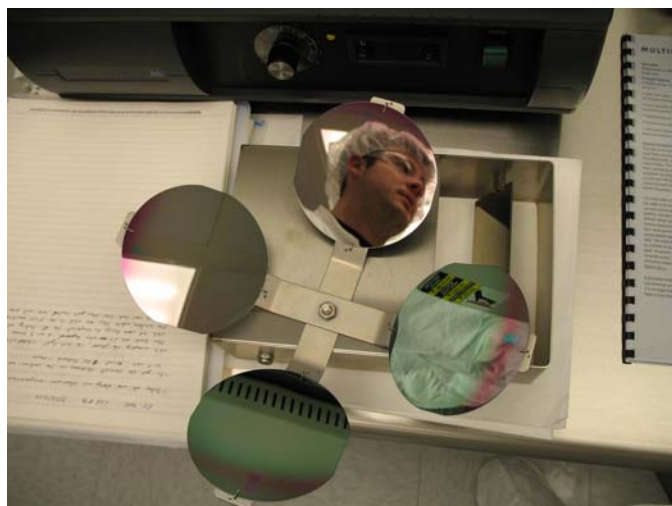

Methods:

Lab 7

1. Taking Pictures:

Use the *Optical Microscope* and *Digital Camera* to take pictures of the vias and contact regions

2. Solvent Clean:

REPEAT: To remove the photoresist a solvent clean is performed. Begin by placing an evaporating dish on the solvent bench to catch solvent waste. Rinse the wafer with *acetone* using the squirt bottle, and follow with *isopropyl* and *methanol*. Rinse the wafers in DI water and dry with a nitrogen gun. When finished pour the solvent waste into the Solvent Waste Container.

3. Aluminum PVD:

The goal of the aluminum evaporation is to create a thin film of aluminum on the topside of the wafer. The aluminum will be patterned with Mask #5 to create electrical contact pads for characterizing the finished devices. The evaporation is accomplished with the *MODULAB PVD system*. See the *MODULAB PVD* operations manual for more information. Approximately 40-50 cm² of aluminum should be evaporated. This will provide roughly 0.5-0.7μm of aluminum on the wafer surface.

This deposition should be done twice to increase the thickness of the aluminum.

Figure 16 Hanging the Wafers in the Evaporator.



4. Sheet Resistivity Measurements:

The aluminum layer on the wafer creates a higher conducting layer on the surface. To characterize the aluminum layer the sheet resistivity is measured. Use the *JANDEL 4-point probe* (**Figure 6**) to measure the sheet resistivity of the aluminum. Start by raising the probe arm, uncapping the tip and placing the wafer on the stage. Align the probes over the rear of the wafer opposite of the flat, then lower the probe arm to make contact with the wafer. Set the current to 1uA (press '1' and 'uA') Press 'FWD' The unit is now passing a current through the sample. It should be giving a positive voltage reading. If the voltage reading is less than a millivolt, increase the current by an order of magnitude until you get a voltage reading of greater than one millivolt. Record the value. Press 'REV' The unit is now passing a current through the sample in the reverse direction. It should be giving a negative voltage reading about the same magnitude as the FWD measurement. Record the value. Increase the current by another order of magnitude but do not exceed 100 mA, the voltage should also increase by an order of magnitude. Record the value Press 'FWD' Record the value for the new forward current, it should be an order of magnitude larger than the previously recorded value. Press 'Ω/□'. This is the sheet resistivity measurement.

Photolithography & Al Contact Etch

Lab 8

GOALS:



1. Photolithography (PV Mask #3 Metal 1)
2. Hardbake
3. Aluminum Etch
4. Measure Aluminum thickness

EQUIPMENT:

- BREWER spin-coater and hotplate
- SHIPLEY 1805 positive photoresist
- ABM Contact Mask Aligner
- MF 319 developer
- PAN Etch
- Wafer Glassware
- AMBIOS Profilometer

PARAMETERS:

Spin-coat & Soft-bake Parameters							
Spin Program	Speed (RPM)	Time (seconds)	Ramp (RPM/s)	Dispense Type (automatic or manual)	Softbake Program	Temperature (°C)	Time (minutes)
#9	5250	30	20000	Manual (static)	#2	115	2
Exposure & Development Parameters (MASK #3)							
Mask Orientation (writing toward or away from user)	Wafer Orientation (flat to the left or the right)	UV Intensity Channel B (mW/cm ²)	UV Dose (J/cm ²)	Exposure Time (seconds)	Development Time (seconds)		
Away	Left	30	~135	4.5	30-60		
Hard-bake Parameters							
Hardbake Program		Temperature (°C)			Time (minutes)		
#2		115			2		
Aluminum Etch Parameters* for 0.5-1um thick aluminum layer							
Etchant	Approx. Etch Rate (Å /min)		Approx. Etch Time (minutes)		Etch Mask		
PAE	350		15* (Room Temperature)		Shipley 1805 Photoresist		

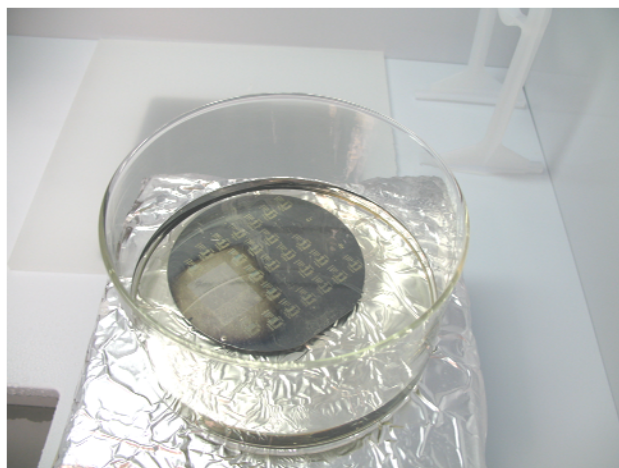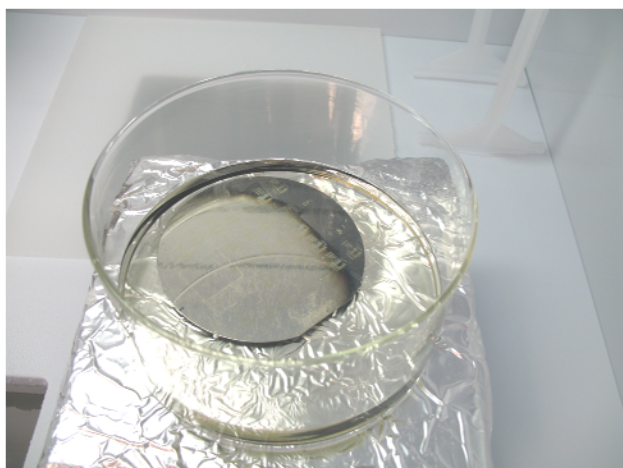


Methods:

1. Photolithography with Mask #3 (Metal 1): Spin-coating & Soft-baking (Check Parameters section for details)

The third mask contains the features for the top side metal contacts.

REPEAT: Begin by using the *BREWER spin-coater* to spin a thin film of *SHIPLEY 1813* photoresist onto the topside of the wafer. Next, transfer the wafer to the adjacent hotplate and soft-bake to remove solvents and harden the resist. A good coating of photoresist will be barely visible to the naked eye and have a minimal number of streaks or blotches (see **Figure 7**). If there are a large number of defects, solvent clean, dehydrate, and try re-spinning more photoresist.

Figure 17 A student using the ABM mask aligner to align Mask #3.

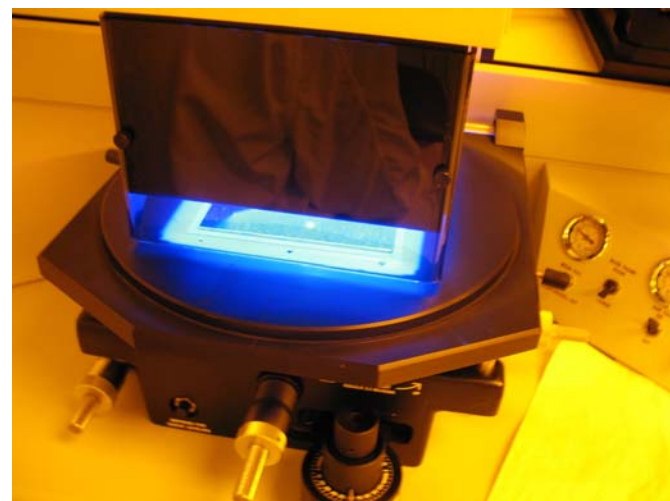

Lab 8

2. Photolithography with Mask #3 (Metal 1): Exposure & Development (Check Parameters section for details)

Proceed by patterning the photoresist with Mask #3.

REPEAT: Load the mask onto the *ABM contact-aligner* mask stage. Turn the mask-vac on and raise the mask stage. Carefully, load the wafer onto the substrate chuck and orient it such that the <110> plane (wafer flat) is to the left and running straight up and down. Turn on the substrate-vac to lock the wafer in place and lower the chuck to avoid hitting the contact mask. Next, lower the mask stage and raise the substrate chuck up to meet the mask, fringe lines will become visible as the wafer and mask come into contact. Align the mask to the wafer using the markers on the sides of the wafer. Turn on the contact-vac to remove any air gap between mask and wafer. Adjust the exposure time and channel setting then expose. Remove the wafer by turning off the contact-vac, lowering the substrate chuck, raising the mask frame, and turning off the substrate-vac. Transfer the wafer to a dish of *MF319 developer* (a faint outline of the features can be seen at this point), submerge the wafer in MF319 and gently swirl for 30-60 seconds until the exposed resist is completely dissolved. If done correctly there should be no photoresist left in the diffusion contact regions (see **Figure 8**). If there is, resubmerge the wafer in the MF319 developer for additional time. If unsuccessful, use a solvent clean to strip the photoresist, dehydrate and re-spin again. When finished, pour the used MF319 into the MF319 waste container located under the solvent bench next to the photoresist.

2. Hard-baking: (Check Parameters section for details)

REPEAT: It has been observed, that without hard-baking, the photoresist exhibits adhesion problems and frequently delaminates from the surface during etching. Hard-baking is very similar to soft-baking and follows the same procedure. Load a wafer onto a hotplate for a set time at the appropriate temperature.

Methods:


3. Etching Aluminum:

(Check Parameters section for details)

The exposed aluminum is removed in PAE (Phosphoric Acid Etch) one wafer at a time. The PAE contains three acids: phosphoric, acetic, and nitric. It etches aluminum at approximately 350Å/min and is highly selective to aluminum compared to photoresist.

Begin by pouring a small amount of PAE into a pyrex or Teflon evaporating dish. Submerge a wafer and gently swirl until the exposed aluminum has been etched. A visible etch front will move across the wafer as the aluminum is removed (see **Figure 17**). The etch will take between 10-15 minutes to complete at room temperature. The etch rate increases with temperature. The evaporating dish can be placed on a hot plate and heated to 70°C to increase the etch rate. The complete etch will then only take several minutes.

Figure 17 Aluminum being etched in PAE. Note the etch front moving from left to right. This is a result of a varying thickness in the aluminum created during the evaporation.

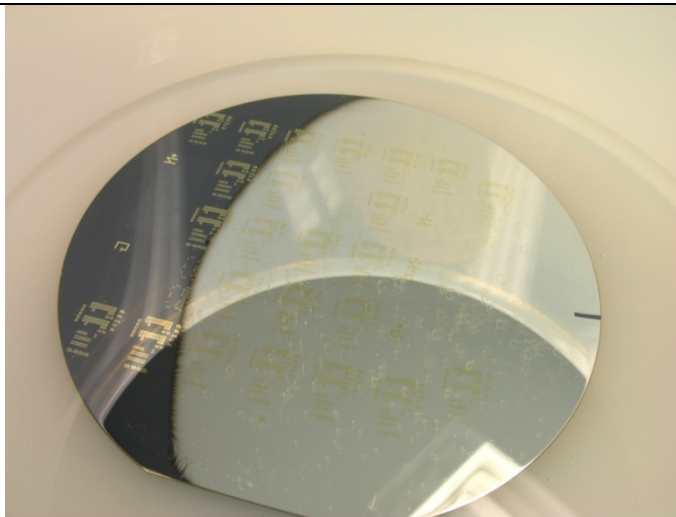

3. Solvent Clean:

REPEAT: To remove the photoresist a solvent clean is performed. Begin by placing an evaporating dish on the solvent bench to catch solvent waste. Rinse the wafer with acetone using the squirt bottle, and follow with isopropyl and methanol. Rinse the wafers in DI water and dry with a nitrogen gun. When finished pour the solvent waste into the *Solvent Waste Container*.

Lab 8


4. Aluminum Thickness Measurements:

Measure the thickness of the patterned aluminum film with the *AMBIOS Stylus Profilometer*, **Figure 18**. Begin by loading a wafer onto the stage. Using the XP2 software move the stage and wafer beneath the stylus. Adjust the stylus height and stage position over a patterned feature. Scan the feature with an appropriate scan length, speed, and force. Consult the AMBIOS operations manual for more details. The results should resemble the following figure, **Figure 19**.

Figure 18 The Stylus Profilometer is used to measure steps in thin films.



Figure 19 Profilometer data of an aluminum pad. The data reveals the thickness of the aluminum film.

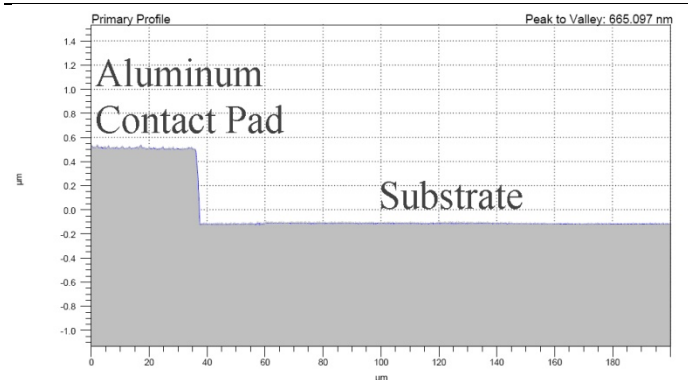

Cleaning & Al Evaporation (Back)

Lab 9

GOALS:

1. Solvent Clean
2. Aluminum PVD
3. Measure Sheet Resistivity
4. Anneal the wafer to improve the electrical contact between the metal and semiconductor

EQUIPMENT:

- Acetone, Methanol, Isopropyl
- MODULAB Physical Vapor Deposition System
- JANDEL 4-point Probe Station
- Programmable Hot-Plate


PARAMETERS:

Aluminum Deposit Parameters* for 3000-4000Å thick Aluminum layer

Al Foil Area (cm ²)	Al Foil Thickness (μ)	Filament to Wafer Distance (cm)	Power Level
30	40	13.5	40%

Annealing Parameters

Boron Furnace	Temperature (°C)	Time (minutes)
Removed doping sources	450	60

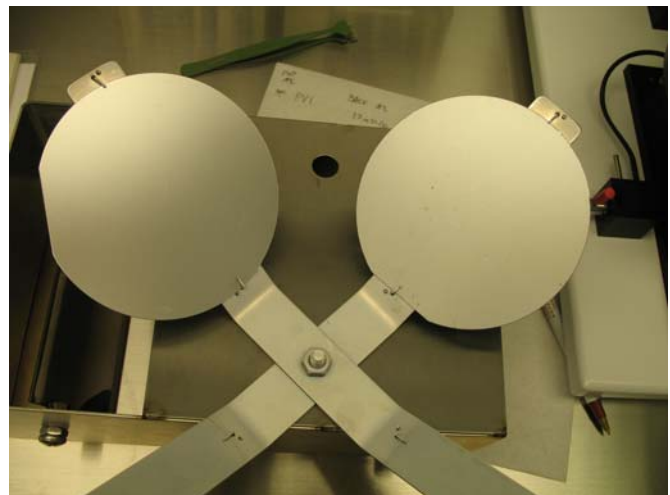

Methods:

Lab 9

1. Solvent Clean:

REPEAT: To remove the photoresist a solvent clean is performed. Begin by placing an evaporating dish on the solvent bench to catch solvent waste. Rinse the wafer with *acetone* using the squirt bottle, and follow with *isopropyl* and *methanol*. Rinse the wafers in DI water and dry with a nitrogen gun. When finished pour the solvent waste into the Solvent Waste Container.

2. Aluminum PVD:

The goal of this aluminum evaporation is to create a thin film of aluminum on the backside of the wafer. The aluminum will not be patterned. The evaporation is accomplished with the *MODULAB PVD system*. See the *MODULAB PVD* operations manual for more information.

Approximately 40-50 cm² of aluminum should be evaporated. This will provide roughly 0.5-0.7μm of aluminum on the wafer surface. If sufficient coverage is not obtained the wafers can be rotated in the holder and a second coat of aluminum can be evaporated over the first coating.

This deposition should be done twice to increase the thickness of the aluminum.

3. Sheet Resistivity Measurements:

The aluminum layer on the wafer creates a higher conducting layer on the surface. To characterize the aluminum layer the sheet resistivity is measured. Use the *JANDEL 4-point probe (Figure 6)* to measure the sheet resistivity of the aluminum. Start by raising the probe arm, uncapping the tip and placing the wafer on the stage. Align the probes over the rear of the wafer opposite the flat, then lower the probe arm to make contact with the wafer. Set the current to 1uA (press '1' and 'uA') Press 'FWD' The unit is now passing a current through the sample. It should be giving a positive voltage reading. If the voltage reading is less than a millivolt, increase the current by an order of magnitude until you get a voltage reading of greater than one millivolt.

Record the value. Press 'REV' The unit is now passing a current through the sample in the reverse direction. It should be giving a negative voltage reading about the same magnitude as the FWD measurement. Record the value.

Increase the current by another order of magnitude but do not exceed 100 mA, the voltage should also increase by an order of magnitude. Record the value Press 'FWD' Record the value for the new forward current, it should be an order of magnitude larger than the previously recorded value. Press 'Ω/□'. This is the sheet resistivity measurement.

4. Annealing:

(Check Parameters section for details)

Typically there is a poor connection between the aluminum and the silicon. This contact can be improved by the inter-diffusion of the aluminum and silicon during the annealing of the wafer. The annealing is done by placing the wafer in the Boron furnace with the sources removed. Set the temperature to 450°C and anneal the wafers for 60 minutes. Remove the wafer once the annealing time has been reached and place it on a stainless steel table to cool before packaging your solar cell to remove from the clean room.

GOALS:


1. Measure the open circuit voltage
2. Measure the short circuit current
3. Create current – voltage plots for each of your four solar cells.

EQUIPMENT:

- Flood Light
- Contact station
- Digital Multi Meter (2)
- Decade Resistor Box

PARAMETERS:

Figure 22 Test set up with flood light as source.

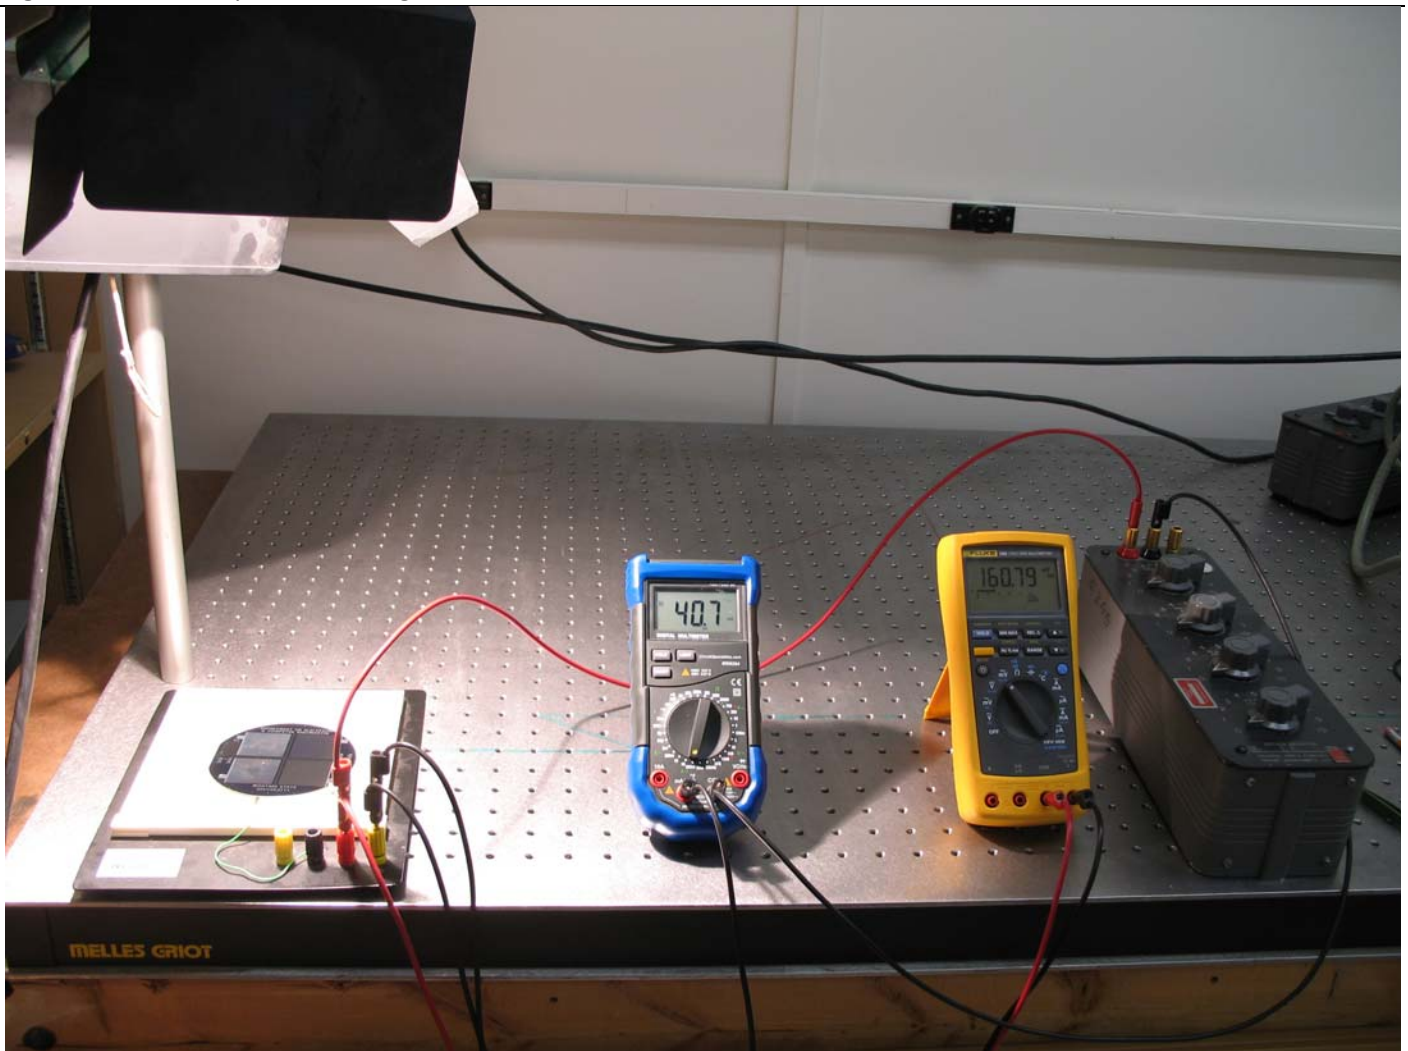

Methods:

1. Open Circuit Voltage


2. Short Circuit Current

The two measurements that gives an indication of the performance of the solar cell are the Open Circuit Voltage (V_{oc}) and the Short Circuit Current (I_{sc}). Both are measured by placing a Digital Multimeter (DMM) across the contacts of the solar cell.


Place your wafer in the test bed be sure that contact is made to one solar cell front pads and the rear aluminum of the wafer. Connect the front side contact to the common terminal of the DDM and the rear contact to the Voltage terminal. Illuminate the solar cell and set the DDM to measure DC voltage. Record the Open Circuit Voltage (Figure 20). Move the Rear contact to the Current Terminal and set the DDM to measure DC current. Record the Short Circuit Current.

Figure 20 Set up to measure the Open Circuit Voltage and the Short Circuit Current of the solar cell.

Open Circuit Voltage

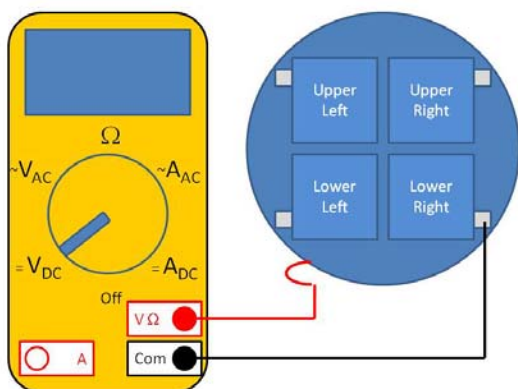

Short Circuit Current

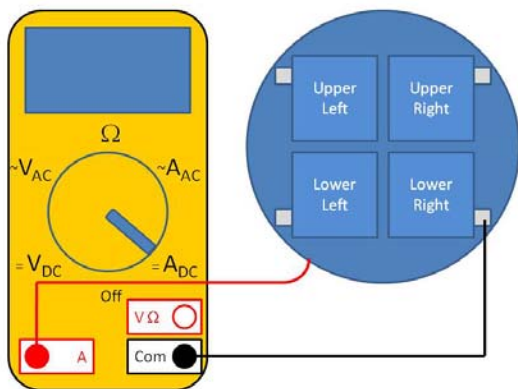


Lab 10

2. Current Voltage Data:

Place your wafer in the test bed. Be sure that contacts are made to one solar cell front pads and the rear aluminum of the wafer. Connect the front side contact to the common terminal of the DMM and the rear contact to the Voltage terminal, turn the knob such that the DMM is acting as a voltmeter (V_{DC}). Connect a second DMM Current terminal to the Voltage terminal of the first DMM and the common terminal to a decade resistor box and turn the knob on the DMM to measure DC current (A_{DC}). Connect the other terminal of the decade resistor box to the common terminal of the first DMM that is acting as a voltmeter. The set up should be ready to measure the voltage and current output of the solar cell as the load resistance is varied as shown in **Figure 23**.

Figure 23 Schematic of the Voltage – Current Measurement System

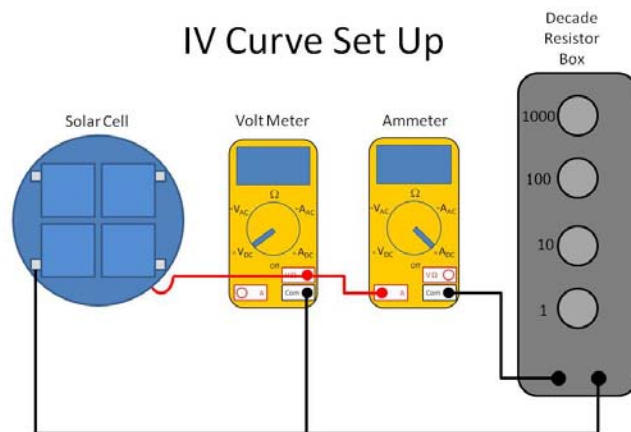

Illuminate the solar cell with the flood light and record the voltage and current readings as the load resistance is varied. Fill out the following results sheet for each of your four solar cells. Record your wafer marking, the fabrication dates, which solar cell you are testing (top left, top right, bottom left, or bottom right) the date you tested your solar cell, the final sheet resistivities and the thermal processing times and temperatures in the places provided. You will be turning in a copy of these sheets for each of your solar cells. They will be used to monitor the process results with the possibility of improving the process in future offerings of the class.

Methods:


Lab 10

At short circuit, the solar cell produces electric current but not voltage. At open circuit, the solar cell produces voltage but no current. Electric power is defined as the product of the current and the voltage. Somewhere between these points where zero power is produced a maximum power operating point exists.

Place the data in a spreadsheet or graphing program with one column recording the voltage another column recording the current and a third column that records the product of the voltage and the current, which is the power generated. Plot the IV curve with the current on the vertical or y-axis and voltage on the horizontal or x-axis. Plot the power in the vertical axis (use the right axis or plot a second graph) and the voltage on the horizontal axis. Find the maximum power on the curve and find the corresponding voltage and current. This is the maximum power your solar cell can produce under this illumination condition.

Repeat these two plots for each of your solar cells. Be sure to discuss the differences in the four solar cells and their corresponding IV curves and power plots in your final lab report.

Calculate the fill factor, $FF = P_{max}/(I_{sc}V_{oc})$. For a good cell this should be 0.7 or greater. It is a measure of how "square" the IV characterization curve is.

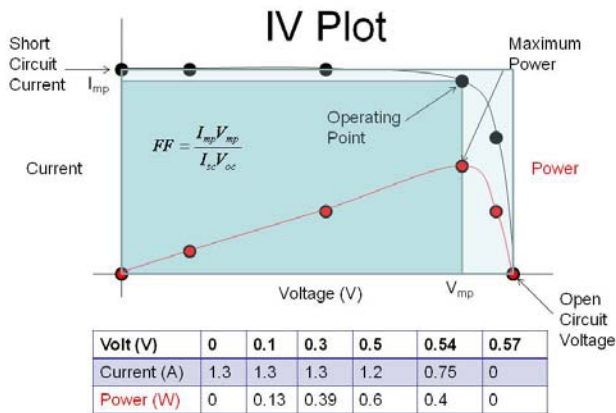

GOALS:

1. Cleave the Wafer into Individual Solar Cells
2. Characterize Individual Solar Cells

EQUIPMENT:

- Metal Scribe
- Flood Light
- Contact station
- Digital Multi Meter (2)
- Decade Resistor Box

PARAMETERS:


Methods:

1. Cleaving Wafers:

The wafer has four individual solar cells that are not electrically isolated from each other. The solar cells can be separated by cleaving the wafer along the crystal planes.

It is easier to make the four edge cleaves first, then separate the four cells by cleaving between them. See figure.

Figure

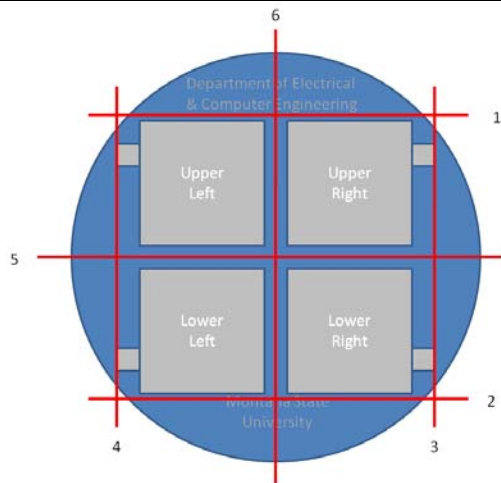

Place the wafer on a smooth surface and place a straight edge along the crystal plane. Take a diamond tipped scribe and firmly scribe along the straight edge. The wafer will want to crack along its crystal plane and the scribed mark will be a weakened area. With firm uniform pressure, the wafer should crack along the scribe line. Continue until the four solar cells are separated.

Lab 11

2. Characterization:

The four solar cells should now be characterized again. Generate the I-V curve for each of the solar cells again. Compare the results to the previous measurements when the solar cells were in contact with each other. Explain any discrepancies in the final lab report

3. Series Connected:


Find three solar cells that are well matched (you may need to use some of your lab partners) and connect them in series. Measure the current and voltage output of the module. How does it compare to the individual cells? Shade one of the cells and note the impact to the current and voltage. Summarize your results in your final lab report.

4. Parallel Connected:


Connect the well matched solar cells in parallel. Measure the current and voltage output of the module. How does it compare to the individual cells? Shade one of the cells and note the impact to the current and voltage. Summarize your results in your final lab report.

Wafer Layout

The following image is of the wafer layout. Each wafer contains 4 devices as well as a test structure.

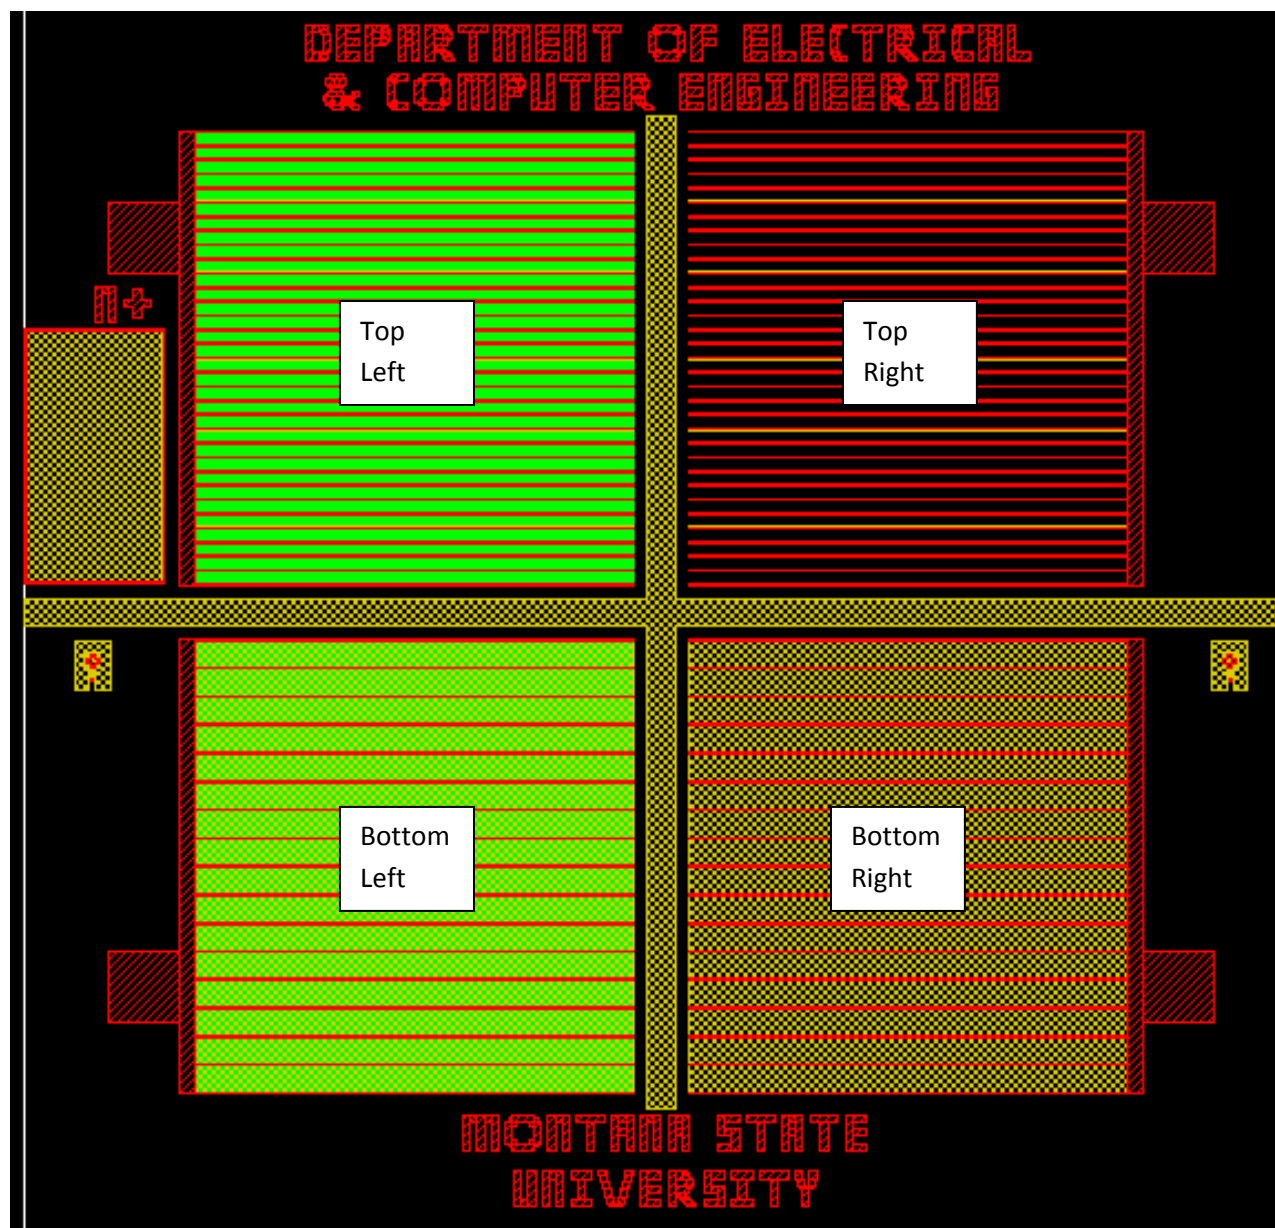

Cell A (not drawn to scale)

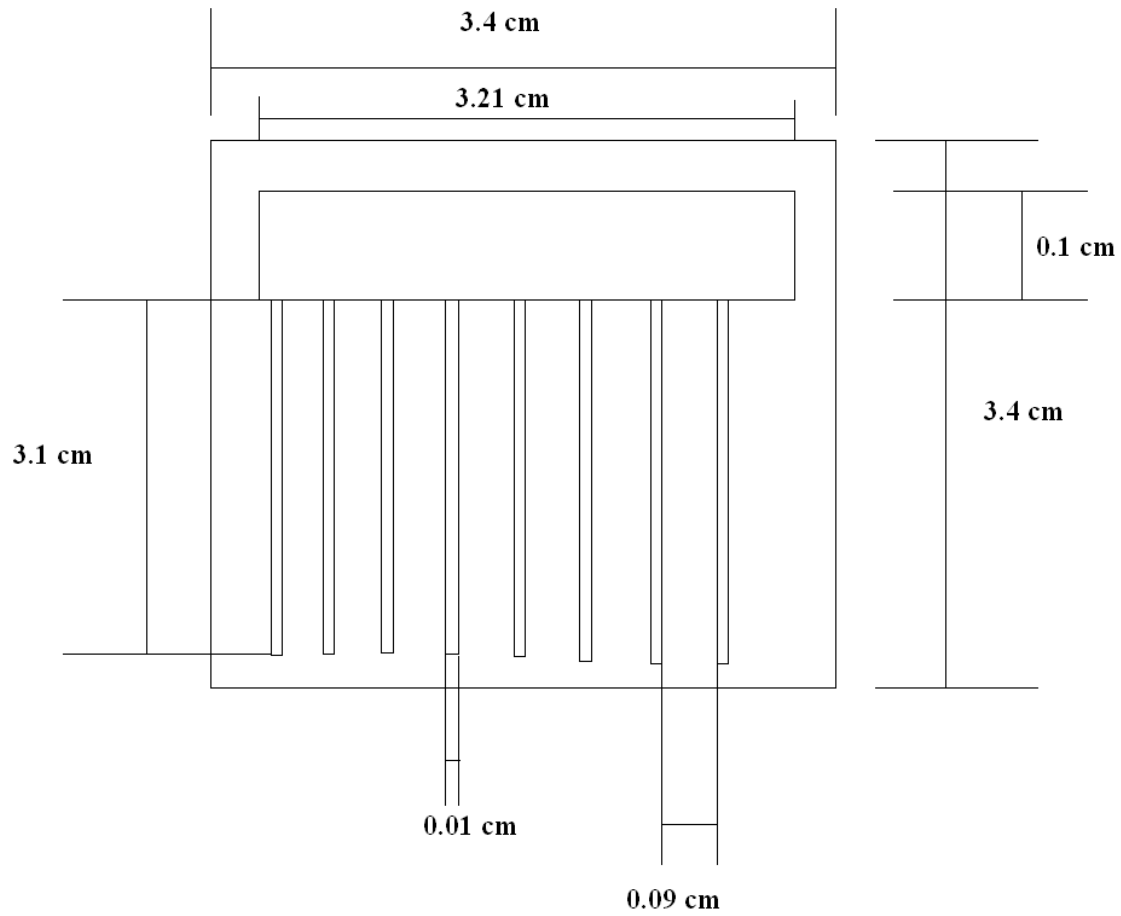

Cell A

Dimensions: 3.4 cm by 3.4 cm

Finger width: 0.01 cm


Finger length: 3.1 cm

Finger separation: 0.09 cm

Bus width: 0.1 cm

Bus length: 3.21 cm

Cell B (not drawn to scale)

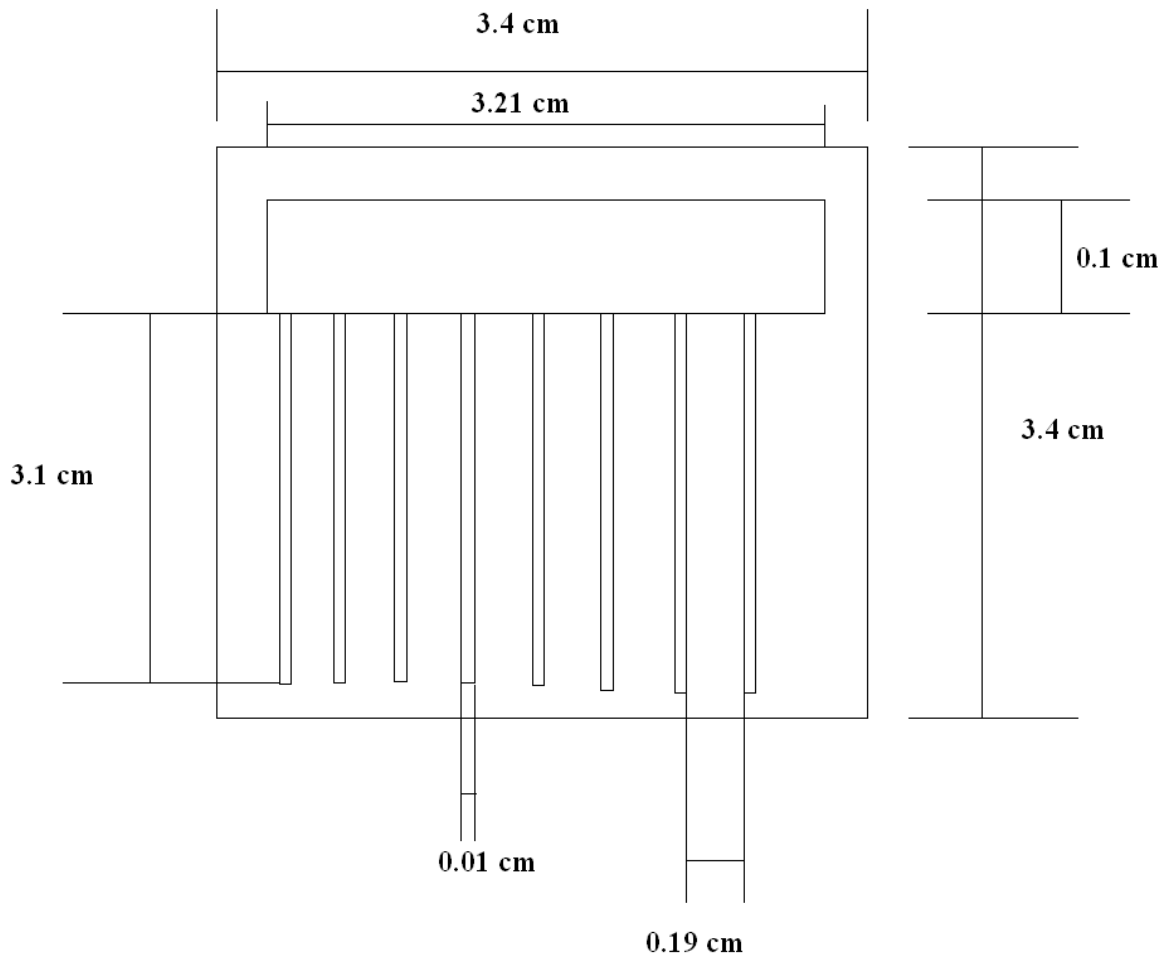

Cell B

Dimensions: 3.4 cm by 3.4 cm

Finger width: 0.01 cm

Finger length: 3.1 cm

Finger separation: 0.19 cm

Bus width: 0.1 cm

Bus length: 3.21 cm

Other info:

Bulk p-type Resistivity = 10-20 ohm/cm

Thickness = 525 microns